




ST1 to Yaesu Rotor Connections: Interface to Rotor Controller Cable

G5400 & G5500

External wiring scheme and cable schematic for ST1 to Interface with Yaesu Rotor Controller:

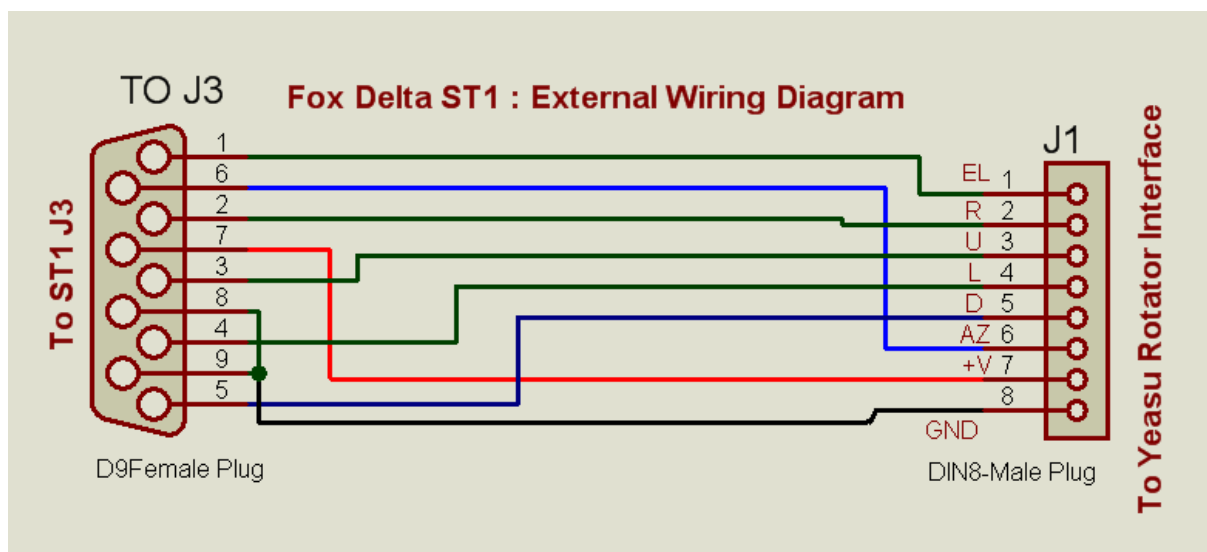

D9M right angle connector is supplied for ST1 to Interface with Yaesu Rotor Controller.

Use a supplied **D9F connector** for making a cable with following guide:


D9F Connections:

1. EL 2 to 4.5V input from Rotor Pots
2. RIGHT
3. UP
4. LEFT
5. Down
6. AZ ADC 2-4.5V from Rotor Controller
7. +12V From Rotor Controller
8. GND
9. GND

Use supplied **DIN 8 Plug** & connect other end of cable with following :

1. EL 2 to 4.5V out to ST3 Interface
2. Right
3. UP
4. LEFT
5. DOWN
6. AZ 2 to 4.5V out to ST3 Interface
7. DC 12V to ST3
8. GND

DIN8 Socket View:

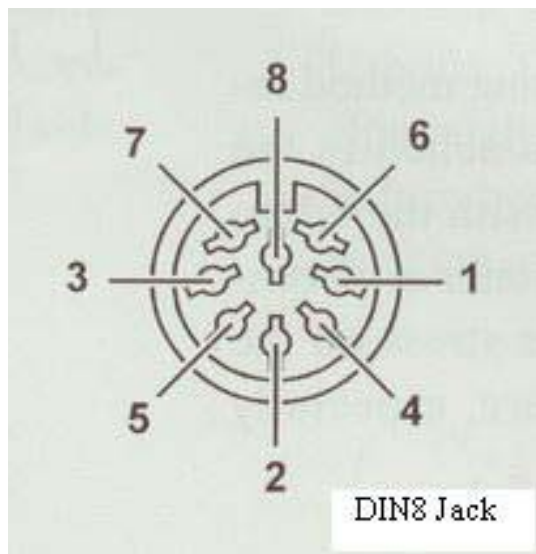

Above cable is suitable for both, G5400 and G5500.

73s/Dinesh Gajjar / 20th NOV 08

For more details, please visit Project Page: <http://www.foxdelta.com>