



Fox Delta

Amateur Radio Projects & Kits

FD - SWM5 - 0815

SWM5-0815: Dual Channel Graphic LCD SWR Meter for HF or VHF

This is the DIP SWITCH Configuration for SWM5:

```
-----  
' BoardConfig7 6 5 4 3 2 1 0  
'           x 0 0 | NA ch0, ch1 digital  
'           x 0 1 | NA ch0 analog, ch1 digital  
'           x 1 0 | NA  
'           x 1 1 | ch0, ch1 analog  
'           1 x x x | 1 -> enable Freq counter ch0  
'           x  
'           x  
'           1           | 0-> on line, 1-> stdAlone,  
'           1           | 1-> test mode  
-----
```

Switches set to "Down" = 0, UP = 1

Good for FW V1.02.

DIP switch settings may be revised for future updates.

73s / Dinesh Gajjar
4th Dec 2015

For more details please visit <http://www.foxdelta.com>