



Fox Delta

Amateur Radio Projects & Kits

FV3

Radio connection Pin Out: FoxView3 LCD APRS Viewer

FoxView3

J2: D9F: Connects to Radio & DC +8 to 12V

1. Audio out from FoxView3 to transceiver (MIC)
2. NC
3. PTT to transceiver
4. NC
5. Transceiver receiver audio input to FoxView3 (RX Input)
6. Power & Signal Ground
7. +12V for FV3 (Parallel to J3)
8. NC
9. NC

J1: D9F: Connects to PC by standard Serial cable. No null modem is required for PC Connection. (When 4 Position DIP switches are set to "Normal")

1. NC
2. Serial Out
3. Serial In
4. NC
5. Ground.
6. to 9, not used.

Dinesh Gajjar / 25th Sept 2010

Please visit <http://www.foxdelta.com> for more information on this project.